
Congratulations with your purchase and the choice for



**Roadtrip 130 and Outback 140
HARDCOVER Rooftop Tents
Instruction manual Koala Creek®**

Please read this manual carefully before mounting and using your rooftop tent



-
- In case of question please ask your Koala Creek® dealer.
 - KOALA CREEK® is a registered trade brand owned by TWISTIM, Outdoor in motion.

TWISTIM, Outdoor in motion.
Schuttersstraat 26B
6191 RZ Beek
The Netherlands
www.koalacreek.info



YOUR ADVENTURE STARTS HERE: with Koala Creek®

UNPACKING YOUR KOALA CREEK® ROOFTOP TENT:

You receive your rooftop tent on a handy lorrie, packed in a sturdy carton box.
So no troubles during transport, and the lorrie is awesome for home storage.

In the big carton is your rooftop tent. *And in your rooftop tent are several items packed:*

Also a small bag with 2 Springrods (for rear door); 4 sets roofbar mounts ; tools.

In the small carton is your rooftop tent ladder and this instruction book.

Please open the cartons carefully to prevent cutting and damaging the tent and ladder

Open the hardcover rooftop tent and take the mounting set bag and springrod bag.

Close it again. Please pay attention to put all fabric inside of rubber.

The mounted elastic will help you to pulle fabric inside!

TIP: leave sides doors open about 10 cm. so air can escape out of the tent.



Mount the rooftop tent on the roofbars with the 4 plates and 8 sliders

(When sliders slide hard pelase spray sliders with teflon or silicone lubricant)

Please contact your Koala Creek® dealer in case supplied mounting materials do not fit.

(For example when mounting on a roof rack, Koala Creek® has 4 special roofrack raisers - mounting plates)

Before mounting you supply some anti seize pasta on the 8 pcs. M8 bolts, to prevent coldweld with the nuts.

When used for rental or oft taken of the car we suggest to use standard 8.8 galvanised mounting material.

The supplied nuts are selfretaining (with plastic ring), also good for anti theft as it takes some time to dismount!

Never use these selfblocking nuts more often then one time!



***Mounting on the roof is ALWAYS with the hinges in front of the car, in the driving direction!
On the next page you see preferred position of roofbars.***

Lift the rooftop tent with 2-4 persons on the roofbars or roofrack.

Lift the rooftop tent and put 4 alloy sliders with plate in an alloy C bar and push them between the roofbars.

Put from all the 4 sides another slider with bolt through the alloy C bars, and mount black plastic end caps.

Mount the 4 plates and use holes as close to the roofbars as possibly, with a washer and selfretaining nut.

Put the rooftop tent in the position you need and tighten nuts.


When tightening nuts, push the mounting plate with your finger down so bolt keeps fixes in alloy slider.

Tighten firmly and check the rooftop tent is sturdy mounted to bars.


Position and distribution of the roof racks. Ensure uniform load bearing.



-With 2 Bars

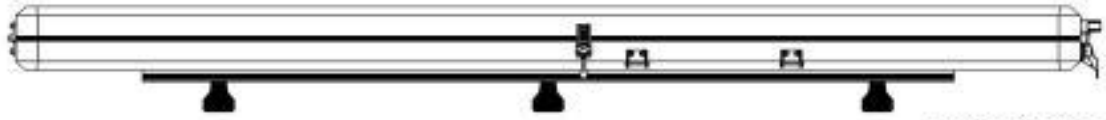

-With 3 Bars

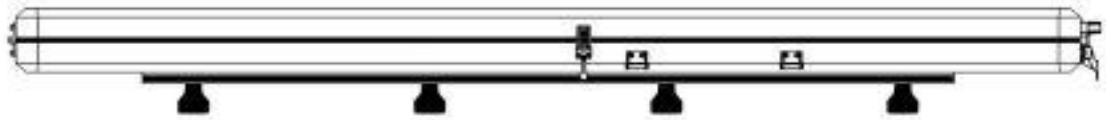

-With 4 Bars



- 1

Roof bar is option.

Open all four latches as shown in the figure.
- 2


Lift the handle up and open the tent.
- 3

Take out the expansion ladder and install it as shown in the figure.
- 4

Take out two spring wire hooks and support the rain fly as shown in the figure.

Take the ladder and mount it - correct positioning from the ladder (Lower the ladder from above)
Open the rooftop tent and mount the 2 spring rods. (Spring rod storage bag over the ventilation on the rear)

Enjoy your sleep!

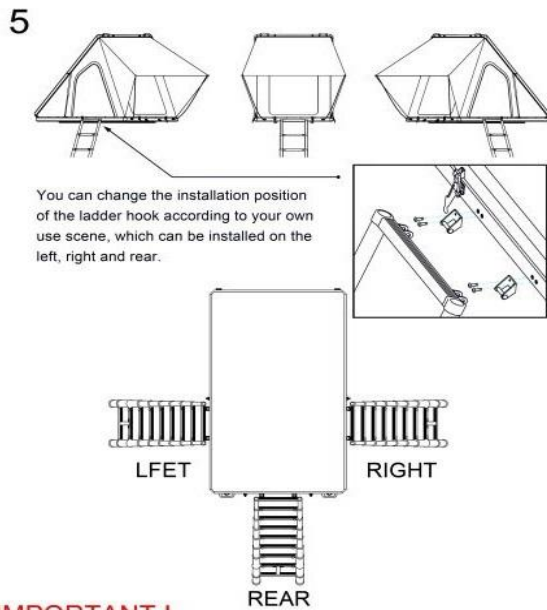

IMPORTANT !



OPTIONS:

Set of aero alloy roofbars.

A slide in Freedom 400 awning with sidewall.

**When closing the tent take care that all fabric is inside the rubbers from the hardcover.
Use the elastic to pull fabric together, and use the extra strap to keep the lid in position when closed to 15 cm.**

CAUTIONS - WARNINGS

1. Please do not move the vehicle with open Rooftop Tent roof tent.
2. The maximum speed with the mounted Rooftop tent is 120km/h
3. Please use the ladder according to the ladder instruction.
4. The maximal load of the tent base is 300kg. Equally divided over the Rooftop tent base.
Depending on the vehicle recommendations.
5. The fabric of tent is made of poly and cotton mix. This makes it waterproof and good resistant to mould.
Hence it can be stowed in a wet condition for a short period of time. However, the roof tent should be completely dried and ventilated after every trip within 24 hour, otherwise mould can form.
(Take care of a dry Rooftop tent when stored for a longer period, the best is storage with open cover)
6. When raining make sure that the inclination of the tent helps water to flow off.
7. **Ensure regularly that all mounting materials are in good condition and properly tightened.**
Check after first 30 and 100 Km. and before and during each trip.

WARRANTY AND CONDITION

A Koala Creek® Rooftop tent is covered by 24 months warranty effective from date of purchase (for first owner and not on wear parts)

The problem occurs under normal used circumstances where the Rooftop tent has been used according instructions in this manual.

The problem is found to be caused by defective or faulty materials, workmanship or manufacturing process.

Original invoice has to be taken over to the Koala Creek® preferred dealer.

Claims that are not covered by above regulations are not covered by warranty.

However, Koala Creek® will do always the utmost to help you,

In case of questions or problem please ask first your preferred Koala Creek® dealer.

He is specialised and always willing to help.